

Yealink

T73U IP Phone

Communicate clearly by equipping your office with the **Yealink SIP-T73U IP Desk Phone**. Designed for versatility with support for up to 12 SIP accounts, this slim IP phone delivers secure, distraction-free conversations.





T-Series Desk Phone Features



- **DIALING CALLS:** Pick up the handset or press a line key and dial a number. You can also enter a number and press the **Call** softkey. You can also use *Contacts* or *Call Log* to find the number you want, then press the **Call** softkey. If you use *Contacts*, you can dial a coworker's Voicemail.
- **RECEIVING CALLS:** Pick up the handset to answer on handset. Press the **Answer** softkey or the **Speaker** button to answer on speaker phone. Press the **Headset** icon to answer with headset.
- **REDIAL:** Press the **Redial Button** to enter the placed call list, press the Navigation key to select the desired entry, and then press the Redial button again or the Call soft key.
- **HOLD:** During a call, press **Hold Button**. The line key flashes red. Press either the flashing line key or the **Resume softkey** to resume the call.
- **TRANSFER:**
 - ASSISTED** – During a call, press the Transfer Button or Transfer Softkey. Enter a number or press the Contacts softkey to find a number. Press the **Call** softkey. When someone answers, inform them of the call to be transferred. Press the **Transfer softkey**, (*or Transfer button again*) and the transfer is completed.
 - UNASSISTED (blind)**– During a call, press the Transfer Button or Transfer Softkey. Enter a number or press the Contacts softkey to find a number. Press the **B Transfer softkey**, and the transfer is completed.
- **MENU:** The menu application is accessed using the Menu **softkey**. It contains configuration and information screens for your phone.
- **CONFERENCE:** (**3-WAY CALLS**) During a call, press the **Conference Softkey**. Dial the third participant's number or use *Contacts* and press the **Call Softkey**. Press the Conference softkey again to connect all participants. To split a conference into separate calls with each participant, press the **Split** softkey and select the participant to drop from the call.
- **SPEEDDIAL:** Press the Menu soft key when the phone is idle, and then select **Features->Dsskey**. Select the desired DSS key, and then press the **Enter** soft key. Select **SpeedDial** from the Type field, select the desired line from the **Account ID field**, enter a label in the Label field and then enter the number in the Value field. Press the **Save** soft key to accept the change.
To use the speed dial key, press the speed dial key to dial out the preset number.
- **CONTACTS:** To add a contact, press the **Directory soft key** when the phone is idle, and then select All Contacts. Press the **Add** soft key to add a contact. Enter a unique contact name in the Name field and contact numbers in the corresponding fields. Press the **Save** soft key to accept the change. You can also edit/delete existing contacts using the **softkey** options.
- **VOICEMAIL:** Press the  icon or the Connect softkey to dial your voicemail extension. Auto-attendant will give options to listen to messages and/or create voicemail recordings.
- **MUTE:** Tap  to mute the microphone during a call. Tap again to un-mute the call.