




Connecting A P330 Desk Phone to Wi-Fi


Step 1)

At the server selection menu, choose **Settings**.

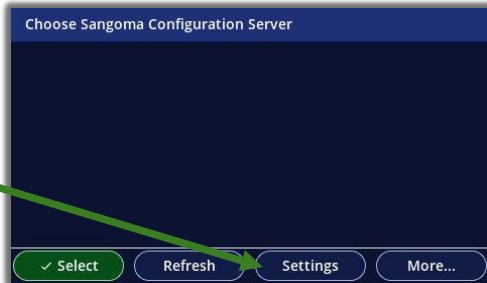


Step 2)

Select **Network Settings** from the Settings Menu.

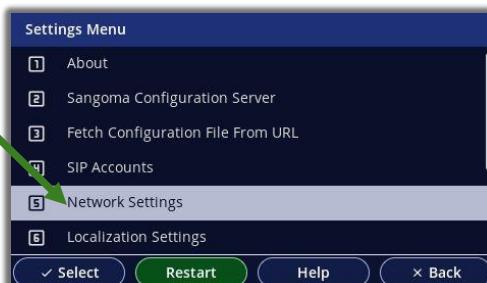

Step 3)

From the Network Settings menu choose **WI-FI Settings**.

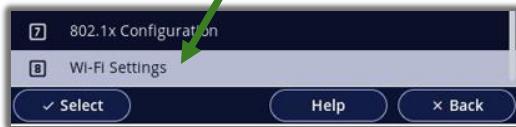

Step 4)

Activate the Wi-Fi settings with the softkey. Then enter in the Wi-Fi **SSID** (Name) and **Password** using the letters on the keypad.
(**0**, *****, **#**, and **1** are used for symbols)



Step 5)

Change Wi-Fi key type to **WPA-WPA2-Personal** and press **✓ Submit**



Phone will automatically reboot.

Configuration Updating...

Restarting phone, please be patient...

Once the phone configures and reboots, the Wi-Fi logo will be on top right of screen.

